

CARE INSTRUCTIONS

JANGAL Laminate

General information

With little time and effort you can help to keep your new laminate floor beautiful for a long time. A room temperature of 18-25°C with a relative humidity of 50-70% ensures your personal well-being and a healthy, pleasant room climate. This means that you can also offer your laminate flooring optimum conditions, because at higher humidity the wood-based panels of the floors, like all wood-based materials, tend to swell. Low air humidity - air conditioning systems and underfloor heating systems must be observed here - lead to shrinkage at high temperatures at the same time. The use of humidifiers is recommended during the heating period.

Better avoid dirt than remove it!

Most of the dirt is transported from the outside into the apartment and kicked on the floor. So the best cleaning is to avoid dirt. Place a sufficiently large dirt-trapping mat in front of your apartment door. Please note: Dirt carried in can cause damage to all floor coverings. Small stones and the like work like sandpaper and lead to unattractive scratches. Chair, table and cupboard feet should be equipped with felt glides so that they can be easily moved and scratches prevented. Another tip: Remember to equip office chairs, file trolleys, roll containers etc. with soft running surfaces/rollers (DIN68131)! You can recognize them by their two-coloured structure. Old, hard and/or sharp-edged castors should be replaced with existing furniture.

First cleaning after installation

Before using for the first time, first remove sawdust, dust and dirt with a broom or vacuum cleaner with a suction nozzle for hard floors. Cleaning is then recommended to remove adhering dirt residues. To do this, the surface must be wiped with a drip-free cloth.

Is the application of care products necessary?

Laminate floors do not require any maintenance treatment with film-forming cleaning and care products, polish or floor polish.

Ongoing cleaning in the living area

Every floor covering is subject to natural wear, which depends on the quality of the floor covering and the load. Regular maintenance cleaning helps to maintain the value of the floor.

- **loose soiling**

Your new laminate flooring has a hard and dense surface. Therefore the dirt can only adhere with difficulty and is usually easy to remove. A vacuum cleaner suitable for hard floors, preferably with an effective dust filter and a suction nozzle for hard floors is suitable. With a well wrung out, non-dripping cloth you can easily and comfortably clean the floor from dust and loose dirt.

- **firmly adhering dirt**

Firmly adhering dirt must be removed by using the recommended cleaning agents. When selecting and using the cleaning agents, observe the instructions in this leaflet for initial cleaning after laying the laminate flooring!

- **stubborn soiling / stains**

In everyday life it can happen that stubborn dirt/stains are created when floors are used. This includes rubber abrasion, heel marks, nail polish and other varnishes, shoe polish, etc.

Not all stubborn dirt/stains can be removed with the recommended laminate floor cleaning agents. In this case, please use a stain remover recommended for laminate floors!

In everyday life it can happen that stubborn dirt/stains are created when floors are used. This includes rubber abrasion, heel marks, nail polish and other varnishes, shoe polish, etc.

Not all stubborn dirt/stains can be removed with the recommended laminate floor cleaning agents. In this case, please use a stain remover recommended for laminate floors!